

PERIMETER SECURITY PRODUCTS


Providing Anti-Terrorism and
Force Protection Products Since 1979.

PROTECTOR Single Person Holding Cell

The PROTECTOR Single Person Holding Cell is designed to hold a prisoners safely with minimum supervision, making it easier to house prisoners at the court-house, hearing room, juvenile hall, etc. The Holding Cells small footprint, 28"W x 32" L x 78" H, makes it possible to locate it almost anywhere, hallways, a room adjacent to the courtroom etc. Units can be mounted side by side to make a continuous row.

Each unit is constructed of heavy gauge tubing and covered with expanded metal that has been welded in place. The whole unit is then painted with a durable powder coat finish that will last for years. The Single Person Holding Cell has built-in casters that can be attached to the base to make it easy to move even thru doorways. Each unit comes with mounting brackets to attach it to the floor and wall for additional stability. Ships fully assembled.

- Keeps Public and Prisoners Safe
- Polyethylene Seat Liner is Simple to Clean
- Attachable Caster for Easy Mobility
- Shipped Fully Assembled

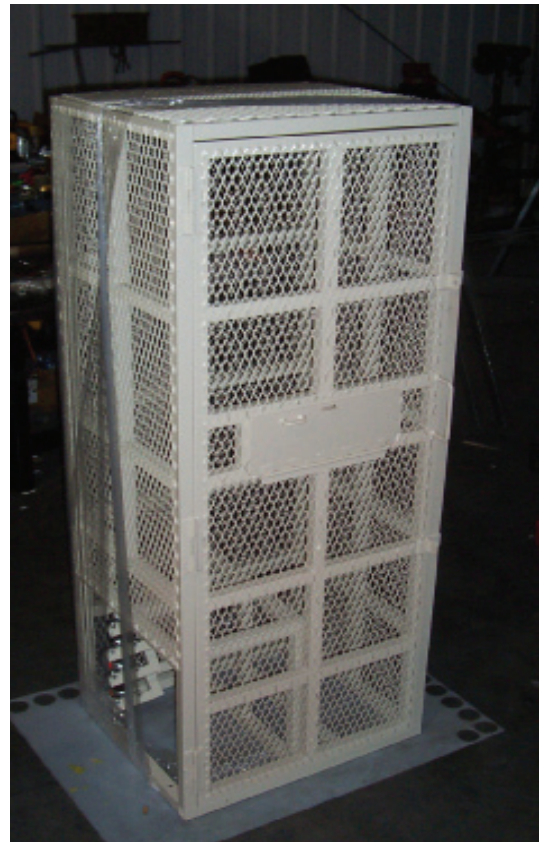

223 North Main Street
Churubusco, IN 46723

Phone: (800)- 860-2855
(260) 432-7158

Fax: (260) 459-0929

Email: sales@soacorp.com

www.soacorp.com

Part Number	Description	Color	Dimensions	Approx. Wt.
SPHC-1T	Single Person Holding Cell	Tan	28"x32"x78"	350 lbs
SPHC-1B	Single Person Holding Cell	Black	28"x32"x78"	350 lbs

PROTECTOR Single Person Holding Cell



Side door entry makes it easy to secure prisoners or remove them with minimal exposure. The polyethylene seat liner simplifies cleaning.



The detachable castors store under the seat, (see center insert). When casters are attached the cell can easily be moved through doors and down narrow hallways.



The door of the Single Person Holding Cell opens from the side, making it easy to place a prisoner in the unit or remove him or her safely. The swing down Handcuff Access Door provides an easy way for guards to attach or remove prisoners handcuffs without opening the cell. It can also be used to pass legal documents, serve meals etc to the detainee.

The FDA approved polyethylene used to make the seat liner provides a smooth surface for the prisoner to set on and simplifies clean up.

The detachable wheels store outside the cell under the seat and can be attached in minutes making it simple to move the unit where need. The unit can be permanently attached to the floor and wall with the supplied brackets and hardware.

Each unit comes completely assembled and includes 3 high quality locks.



The swing down handcuff door provides access to prisoners without exposing guards.



6409 HIGHVIEW DR
FORT WAYNE IN 46818

Phone: 800-860-2855
Fax: 260-432-7158
Website: www.soacorp.com